



@SETUPE1

Enter Setup



USB Country Keyboard Types

Keyboard layouts vary from country to country. The default setting is U.S. keyboard.



@KBWCTY0

** U.S. (English)

Lecteur de



@KBWCTY2

 
Brazil

Code Bonne



@KBWCTY1

Belgium



@KBWCTY4

Czechoslovakia

NEWLAND



@KBWCTY3

Canada (French)



@KBWCTY6

Finland (Swedish)

NLS - HR 22



@KBWCTY5

Denmark



@SETUPE0

** Exit Setup

